

APPLICAZIONI: / APPLICATIONS:



MODELLO MODEL	230V 1PH Monofase Single-phase	400V 3PH Trifase Three-phase	ALTERNATORE ALTERNATOR		POTENZA TRATTORE TRACTOR POWER	PRESA DI FORZA PTO	CAPACITÀ OLIO OIL CAPACITY	L W H			Kg	IP	Prezzo Price (IVA esclusa) €
	PRP kW	PRP KVA	tipo type	RPM	HP	velocità speed RPM	l	L cm	W cm	H cm			
Land TR17	5,3	16,0	2 poles, Compound	3000	49	430	0,5	95,5	83,3	91,5	125	23	2.160,00
Land TR27	9,0	27,0	2 poles, Compound	3000	83	430	0,5	116	83,3	91,5	149	23	2.900,00
Land TR38	12,7	38,0	2 poles, Compound	3000	112	430	0,5	116	83,3	91,5	205	23	3.700,00
Land TR27	9,0	27,0	4 poles, Compound	1500	80	430	0,5	116	83,3	91,5	200	23	3.350,00
Land TR30	10,0	30,0	4 poles, Compound	1500	87	430	0,5	116	83,3	91,5	215	23	3.890,00
Land TR19	6,3	19,0	2 poles, AVR	3000	60	430	0,5	95,5	83,3	91,5	124	23	2.975,00
Land TR20	6,7	20,0	2 poles, AVR*	3000	61	430	0,5	95,5	83,3	91,5	123	23	2.455,00
Land TR24	8,0	24,0	2 poles, AVR*	3000	72	430	0,5	95,5	83,3	91,5	143	23	2.540,00
Land TR25	8,3	25,0	4 poles, AVR	1500	77	430	0,5	116	83,3	91,5	205	23	3.480,00
Land TR30	10,0	30,0	4 poles, AVR	1500	95	430	0,5	116	83,3	91,5	228	23	3.695,00
Land TR45	18,0	45,0	4 poles, AVR	1500	128	430	0,5	116	83,3	91,5	258	23	4.350,00
Land TR50	16,7	50,0	4 poles, AVR	1500	144	430	0,5	116	83,3	91,5	298	23	5.095,00
Land TR65	21,7	65,0	4 poles, AVR	1500	202	400	2	121	97,5	92,3	335	23	6.590,00
Land TR80	26,7	80,0	4 poles, AVR	1500	247	400	2	121	97,5	92,3	362	23	7.150,00
Land TR93	31,0	93,0	4 poles, AVR	1500	285	400	2	121	97,5	92,3	382	23	8.295,00

* AVR con spazzole - AVR with brushes



Foto indicativa.
Picture as a way of example.

Dotazione Standard:

- Interruttore Magnetotermico;
- Interruttore Differenziale;
- Voltmetro;
- Amperometro (Optional su TR17);
- Frequenzimetro;
- Contatore (Optional su TR17);
- TR17: 1x CEE 16A 230V, 1x CEE 32A 400V;
- TR27/38/30: 1x CEE 16A 230V, 1x CEE 63A 400V;
- TR42: 1x schuko, 1x CEE 32A 230V, 1x CEE 63A 400V;
- TR53/65/80/93: 1x schuko, 1x CEE 32A 230V, 1x CEE 125A 400V.

Standard Equipment:

- Magnetothermal Switch;
- Earth Fault Breaker;
- Voltmeter;
- Ammeter (Optional on TR17);
- Frequency meter;
- Hour Meter (Optional on TR17);
- TR17: 1x CEE 16A 230V, 1x CEE 32A 400V;
- TR27/38/30: 1x CEE 16A 230V, 1x CEE 63A 400V;
- TR42: 1x schuko, 1x CEE 32A 230V, 1x CEE 63A 400V;
- TR53/65/80/93: 1x schuko, 1x CEE 32A 230V, 1x CEE 125A 400V.